

 
OKI Data Printer Setup

Last Modified on 06/17/2024 10:44 am CDT


The following describes how to configure OkiData 320 Microline printers with USB connections to print Wide-3 format Agvance Grain Scale Interface Scale Tickets. This article can also be used as a general guide for setting up these printers for other Scale Ticket formats.

Setup


1. Plug the USB cable into a USB port. The print driver automatically loads in Windows 8.
2. Select the printer and choose **Print Server Properties** at the top of the page.

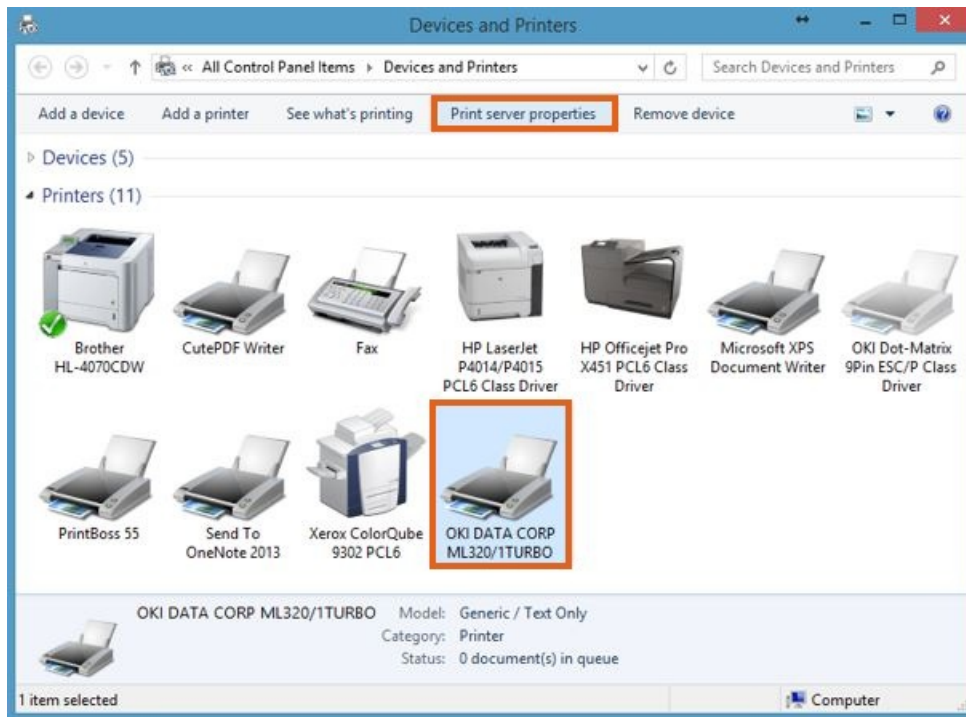

 3. Check the *Create a new form* checkbox and enter *Oki Data ticket form* in the *Form Name* text box. Change the *Width* and *Height* to *8.50in* and *5.50in* respectively. Select **OK** to save the form and return to the *Devices and Printers* window.

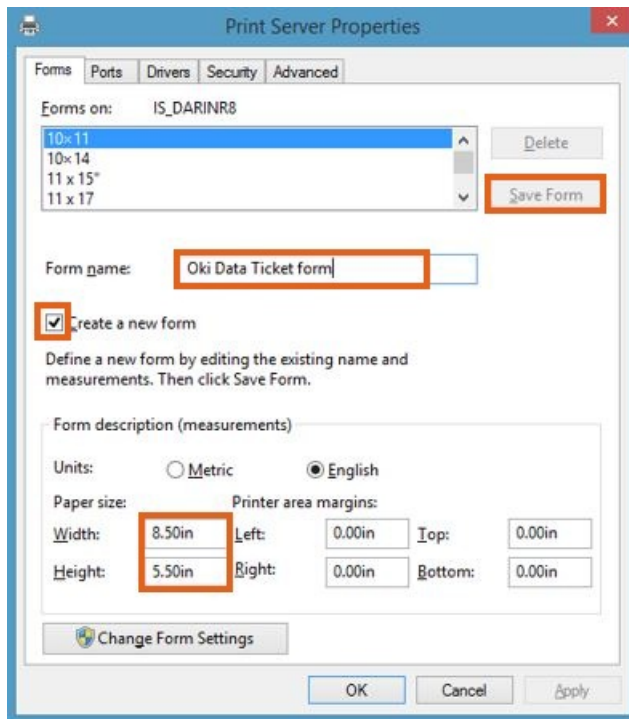


 4. At the *Devices and Printers* window, right-click the printer and choose *Printer Properties*. Go to the *Advanced* tab.
5. Select *New Driver*. Choose *Next* at the *Add Print Driver* wizard.

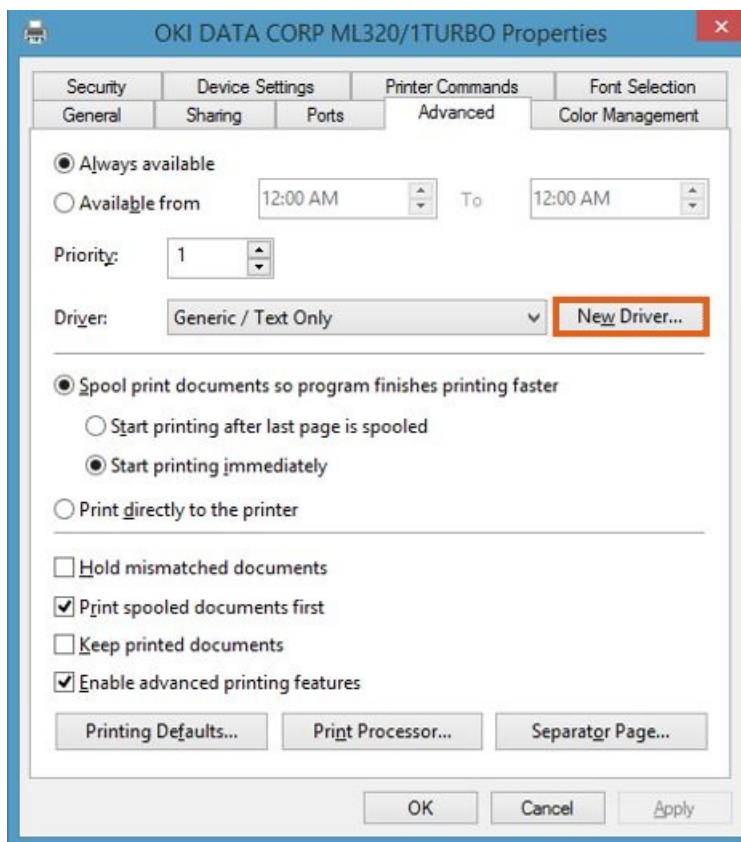


6. Select *Generic* from the *Manufacturer* area on the left. Under *Printers*, choose *Generic/Text Only*.

 
7. Choose **Next** and then **Finish** to return to the *Printer Properties* window.

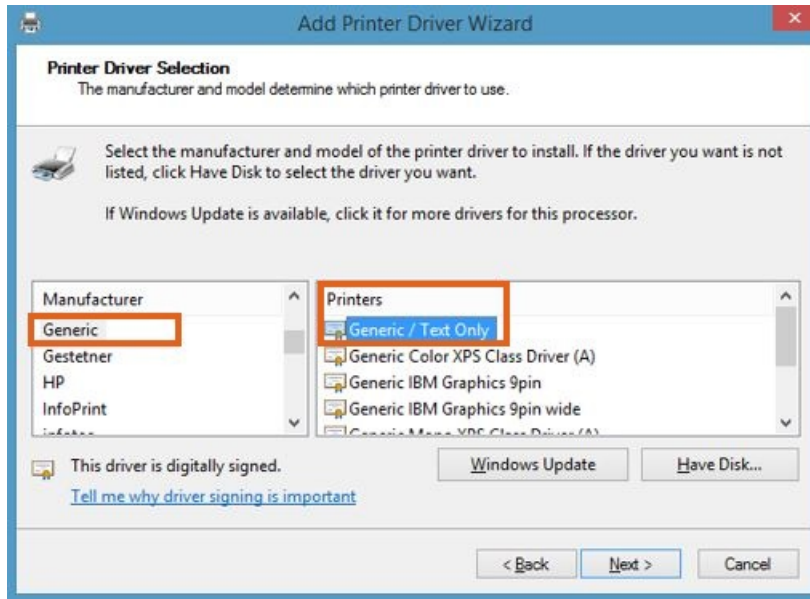

 
8. On the *Advanced* tab, choose **Printing Defaults**. On the *Printing Defaults* window, select **Advanced** in the bottom right corner.

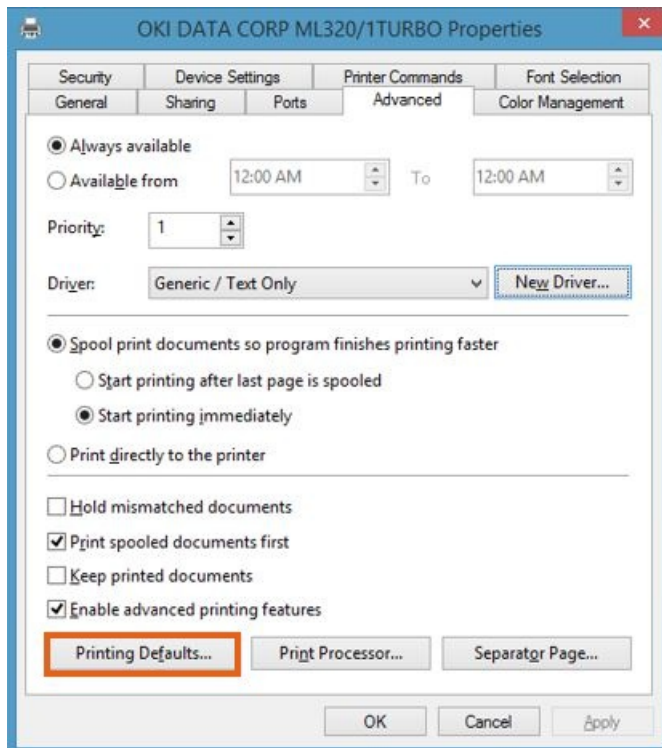

 
9. Change the *Paper Size* to the *Oki Data Ticket Form* created earlier. Choose **OK** twice to return to the *Printer Properties* window.

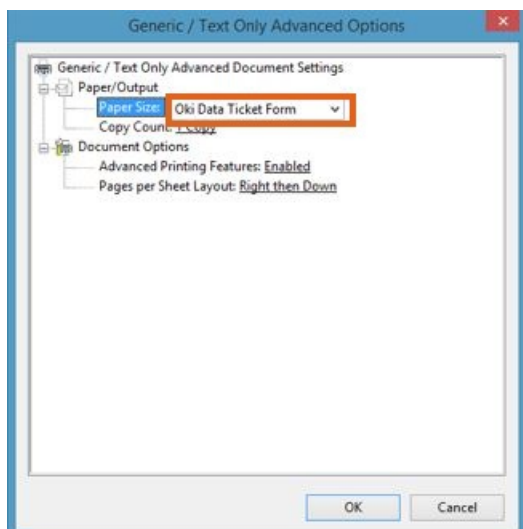

 10. On the *General* tab, select **Preferences**. On the *Printing Preferences* window, choose **Advanced** located in the lower left area of the window.

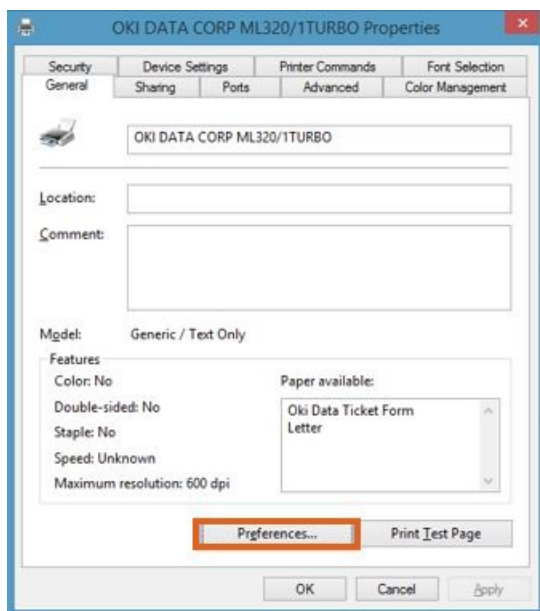

 11. Change the *Paper Size* to the *Oki Data Ticket Form* created earlier and select **OK** twice.

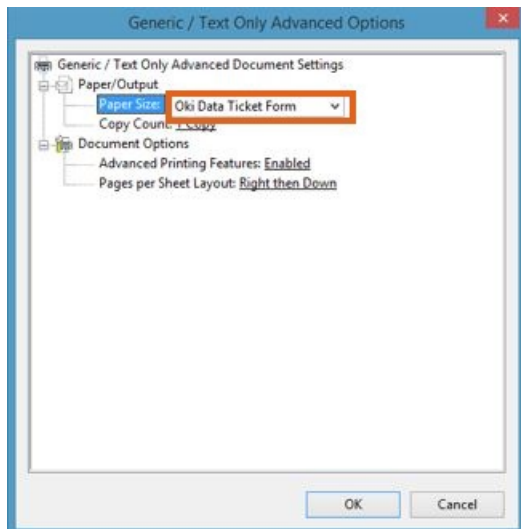

12. On the printer, adjust the *Character Pitch* on the front panel to 10. The OKI Data Printer should now be ready for use.

